
Instructions for the Level 2 operator (emergency mode access)

Tasks that require you to log on as a Level 2 operator

| What is it you want to do | This is how you do it |
|---|--|
| Log onto the panel as a Level 2 operator | Turn the Enable Controls key 1/4 of a turn clockwise. — or — 1. Press Menu. 2. Choose Login then enter the password required for Level 2 access. |
| Reset the panel | Press System Reset. |
| Turn off alarm signaling circuits when the panel is in alarm (Alarm Silence) | Press Alarm Silence. |
| Turn on alarm signaling circuits when the panel is not in alarm (Drill) | Press Drill then Enter. |
| Get a list of all events processed on a panel | 1. Press Menu. 2. Choose Reports > History. 3. Enter the panel number. 4. Choose Display to view the list on the CPU/Display unit. — or — Choose Printer to print the list. |
| Change the password required for Level 1 access | 1. Press Menu. 2. Choose Program > Edit Password > Level 1. 3. Enter the new password. |
| Switch automatic detectors to their alternate sensitivity settings | 1. Press Menu. 2. Choose Activate > Alt Sens. |
| Switch automatic detectors to their primary sensitivity settings | 1. Press Menu. 2. Choose Restore > Prm Sens. |

Tasks that require you to log on as a Level 2 operator

| What is it you want to do | This is how you do it |
|--|---|
| Distribute event records according to their alternate message routing | <ol style="list-style-type: none">1. Press Menu.2. Choose Activate > Alt Msg Route. |
| Distribute event records according to their primary message routing | <ol style="list-style-type: none">1. Press Menu.2. Choose Restore > Prm Msg Route. |
| Disable a Zone | <ol style="list-style-type: none">1. Press Menu.2. Choose Disable > Zone.3. Select a Zone from the pick list then press Enter. |
| Enable a Zone | <ol style="list-style-type: none">1. Press Menu.2. Choose Enable > Zone.3. Select a Zone from the pick list then press Enter. |
| Disable a device | <ol style="list-style-type: none">1. Press Menu.2. Choose Disable > Device.3. Enter the device address, where: PP is the panel number (01) CC is the card number DDD is the circuit or device number |
| Enable a device | <ol style="list-style-type: none">1. Press Menu.2. Choose Enable > Device.3. Enter the device address, where: PP is the panel number (01) CC is the card number DDD is the circuit or device number |